

Black Widow

ORDERCODE 40213



SHOWELECTRONICS FOR PROFESSIONALS

Congratulations!

You have bought a great, innovative product from Showtec. The Showtec Black Widow brings excitement to any venue.

You can rely on Showtec, for more excellent lighting products.

We design and manufacture professional light equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

For more information: iwant@showtec.info

You can get some of the best quality, best priced products on the market from Showtec. So next time, turn to Showtec for more great lighting equipment. Always get the best -- with Showtec!

Thank you!



Showtec

Showtec Black Widow™ Product Guide

Warning	3
Safety-instructions	3
Operating Determinations	4
Description Features	5
Features	5
Installation	5
Installation Installing the Lamp	5
Set Up and Operation	5
Maintenance	6
Changing the Lamp	6
Replacing the Fuse	6
TroubleshootingNo Light	6
No Light	6
Product Specifications	7



CAUTION! Keep this device away from rain and moisture!



FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!

SAFETY INSTRUCTIONS

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



CAUTION! Be careful with your operations.

With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to gualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never leave the device run without a lamp!
- Do not open the device and do not modify the device.
- Do not insert objects into air vents.
- Do not connect this device to a dimmerpack.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Never look directly into the light source.
- Never leave any cables lying around.
- Do not switch the device on and off in short intervals, as this would reduce the lamp's life.
- Never use the device during thunderstorms, unplug the device immediately.
- Do not touch the device's housing bare-handed during its operation (housing becomes hot).
- Only use device indoor, avoid contact with water or other liquids.
- Avoid flames and do not put close to flammable liquids or gases.
- Only operate the device after having familiarized with its functions.
- Always replace the lamp, when it is damaged or deformed due to the heat.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.

- Always disconnect power from the mains, when device is not used, before cleaning or when
 replacing lamp! Only handle the power-cord by the plug. Never pull out the plug by tugging the
 power-cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- Make sure that no side forces can impact on the truss system.
- Make sure that the cable diameter of the extension cords and powercables are sufficient for the current consumption of the device.
- The powercable may not be modified, broken, mechanically strained, pressed together or heated.
- The cable insert or the female part in the device must never be strained. There must always be sufficient cable to the device. Otherwise, the cable may be damaged which may lead to deadly electrical shocks.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- Never switch the lamp on if the housing cover is open. Burning lamps can cause a high ultraviolet radiation, which can cause fire.
- Never let the strobe run without the protective shield!
- The protective shield has to be replaced when it is obviously damaged, so that its function is impaired, e.g. due to cracks or deep scratches!
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Lighteffect must be installed out of the reach of children. Never leave the unit running unattended.
- Allow time to cool down, before replacing lamp.
- Only install the device with the hanging-bracket.
- The user is responsible for correct positioning and operating of the Mini Strobe. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class II. Therefore it is essential to connect the yellow/green conductor to earth.
- During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- For replacement use lamps and fuses of same type and rating only.
- WARRANTY: Till one year after date of purchase.



CAUTION! EYEDAMAGES!. Avoid looking directly into the light source. (meant especially for epileptics)!



OPERATING DETERMINATIONS

This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.

The minimum distance between light-output and the illuminated surface must be more than 0,3 meters.

The maximum ambient temperature $t_a = 45^{\circ}$ C must never be exceeded.

The relative humidity must not exceed 50 % with an ambient temperature of 45° C.

If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.

Any other operation may lead to dangers like short-circuit, burns, electric shock, lamp explosion, crash etc.

You endanger your own safety and the safety of others

Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself!

Always let the installation be carried out by an authorized dealer!

Procedure:

- If the Black Widow is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the Black Widow, with the mounting-bracket, to the trussing system.
- The Black Widow must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the device, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

Improper installation can cause serious damage to people and property!

Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

Cable	Pin	International
BROWN	FASE	L
BLUE	NUL	N
YELLOW/GREEN	EARTH	(

Make sure that the device is always connected properly to the earth!

Description of the device

Features

The Black Widow is a Strobe with high output and great effects.

• Strobe-effect with adjustable speed (1-15 Flashes/sec.)





1 2 3 4 5

Fig. 1 Fig. 2

- 1) Fuse
- 2) ON / OFF
- 3) Manual control of the flashrate
- 4) Signal IN
- 5) Signal OUT

Installation

Installing the Lamp

The Showtec Black Widow Strobe uses the PXA-50 (ordercode 80601) lightbulb as manufactured by all popular manufacturers. Use only the appropriate lamp for your unit.

Note that, product versions that use other lamps, may be offered in the future. Check your product specification label for information.

Always disconnect from electric mains power supply before changing lamps.

The lamp has to be replaced when it is damaged or deformed due to the heat.

Do not install lamps with a higher wattage! Lamps with a higher wattage generate temperatures the device was not designed for.

Damages caused by non-observance are not subject to warranty.

Warning: Allow 15 minutes to cool down, before replacing lamp.

Procedure:

- 1. Gently remove the protective shield and then the old bulb. Read lamp instructions. Do not touch the lamp bulb glass. Oil on hands shortens the lamp life. (If you touch the bulb glass, wipe off the glass with a clean, lint-free towel and rubbing alcohol.).
- 2. Insert the new lamp and then put the protective shield back.

Set Up and Operation

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Always disconnect from electric mains power supply before cleaning or servicing.

Damages caused by non-observance are not subject to warranty.

Maintenance

The Showtec Black Widow requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe protective shield clean with glass cleaner and a soft cloth. Do not use alcohol or solvents. Keep connections clean. Disconnect electric power, and then wipe the connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

- **1.** All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
- **2.** There may not be any deformations on housings, fixations and installation spots.
- 3. Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
- **4.** The electric power supply cables must not show any damages or material fatigue.

Changing the Lamp

If the device is connected to power supply and the lamp is not on, the lamp might need to be replaced. The replacement of the lamp functions as follows:

- 1. Disconnect mains power supply.
- **2.** Follow directions for installing a new lamp, page 5.

Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below to do so.

- **1.** Unplug the unit from electric power source.
- **2.** Insert a flat-head screwdriver into a slot in the fuse cover. Turn the screwdriver to the left, at the same time gently push a bit (Turn and Push). The fuse will come out.
- 3. Remove the used fuse. If brown or unclear, it is burned out.
- **4.** Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Troubleshooting

Showtec Black Widow

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

- **1.** If the device does not operate properly, unplug the device.
- 2. Check the fuse, power from the wall, all cables, etc.
- **3.** If all of the above appears to be O.K., plug the unit in again.
- **4.** If nothing happens after 30 seconds, unplug the device.
- **5.** Return the device to your Showtec dealer.

No Light

This troubleshooting guide is meant to help solve simple problems. If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps

If the light effect does not operate properly, refer servicing to a technician.

Response: Suspect two potential problem areas: the power supply or the lamp.

- 1. Power supply. Check that the unit is plugged into an appropriate power supply.
- **2.** The lamp. Replace the old lamp with a new one with the same specifications. See page 5 for replacing lamps.

Product Specification

Model: Showtec Black Widow Voltage: AC 230V-50Hz (CE) Speedcontrol: 1-15 flashes/sec.

In- and output: 2 x 6,3 mm mono jack. Lamp included: PXA-50 50W (80601) Dimensions: 220x175x225mm (LxWxH)

Weight: 0,225 kg

Lamp

Allowed lamp models*:

Showtec PXA-50 50W ordercode 80601



Design and product specifications are subject to change without prior notice.





© 2006 Showtec.